

Softseal System – Linear Joint Seals

Tools required

- Sharp insulation knife or insulation saw
- Paint brush
- Sealant gun
- Tape measure / rule

Ancillary products

Softseal Flexible coating, Softseal High Expansion Sealant, Softseal Intumescent Sealant



Fixing and application

 
1. Measure the width of the Linear Joint to be sealed.
2. Cut the FIREPRO® SoftSeal Coated Strips 25% bigger than the joint width, so when installed they are under compression.
3. Ensure substrate is clean and free of dust and debris.
4. Install the FIREPRO® SoftSeal Linear Joint Seal with the coating on the top surface.
5. Apply FIREPRO® SoftSeal Flexible Coating to the face of all joints between the seal and the substrate, overlapping by 20mm.
6. Apply FIREPRO® SoftSeal Flexible Coating to the faces of all butt joints between pieces of Soft Seal Linear Joint Seal.

Health & safety

The mechanical effect of fibres in contact with skin may cause temporary itching.




Cover exposed skin
When working in unventilated area wear disposable face mask.




Clean area using vacuum equipment.



 Waste should be disposed of according to local regulations.



Rinse in cold water before washing.

 

Ventilate working area if possible.



Wear goggles when working overhead.