


# Acoustic Infills

## Tools required

- Fine toothed saw
- Tape measure

## Fixing and application

Insert ROCKWOOL Acoustic Infills directly into the troughs of the metal deck, ensuring that all joints are tightly butted. Individual Acoustic Infills can be cut down to shorter lengths using a fine toothed saw or sharp knife if required.

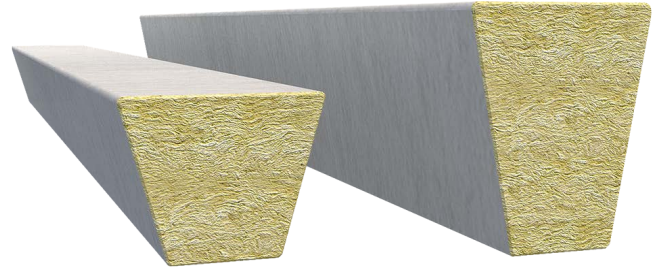

## Specify SPRA

The Single Ply Roofing Association (SPRA) represents membrane manufacturers, associated component manufacturers and specialist subcontractors, and aims to ensure the delivery of best value single ply roofing systems, through a quality assured partnership. By specifying products and specialist installation by SPRA Manufacturer, Associate and Contractor members you can be assured that all parties meet strict quality criteria.

Compliance with these criteria and with the Code of Conduct is assessed at application, by annual audit and by random spot checks. For further information, and to obtain copies of the SPRA Design Guide and other documents, go to [www.spra.co.uk](http://www.spra.co.uk) or call 0115 914 4445.

## Health & safety

The mechanical effect of fibres in contact with skin may cause temporary itching.



Cover exposed skin  
When working in unventilated area wear disposable face mask.



Clean area using vacuum equipment.



Waste should be disposed of according to local regulations.



Rinse in cold water before washing.



Ventilate working area if possible.



Wear goggles when working overhead.